
IP BOLD firmware upgrade

What is my current firmware version of IP BOLD doorphone?


Please check it in IP BOLD web interface, default IP address 192.168.1.250, Status page

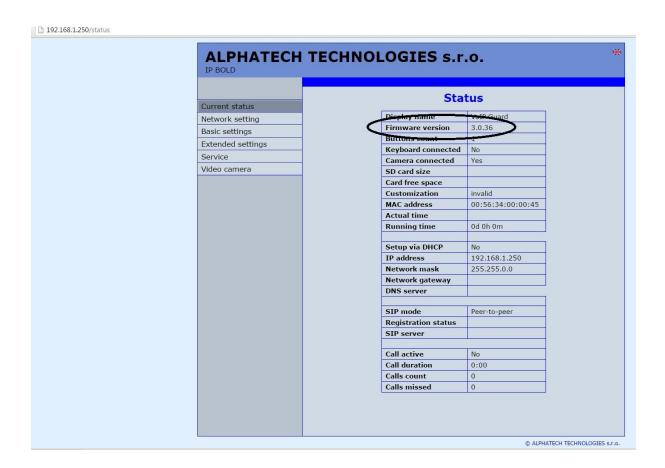

At the support page of https://www.alphatechtechnologies.cz/ you can find the latest firmware for your IPv2 type of doorphone (e.g. IP BOLD, IP BELLv2, IP VarioBell or similar)

How do I upload the new firmware? Download the zipped file, unzip it. Never upload a zipped file.

Upload .firmware file this way:

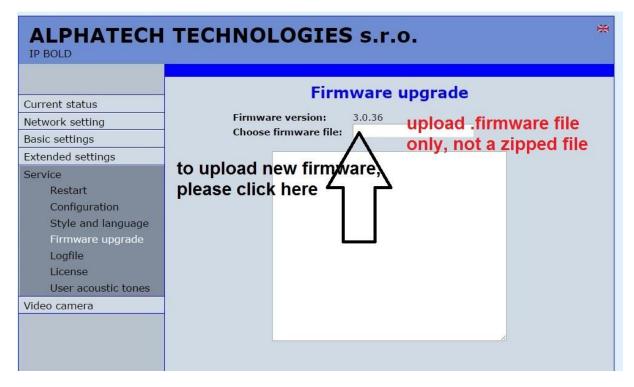


Wait till the upgrade has finished successfully:



Successful upgrade is shown as follows:



Click on Restart button

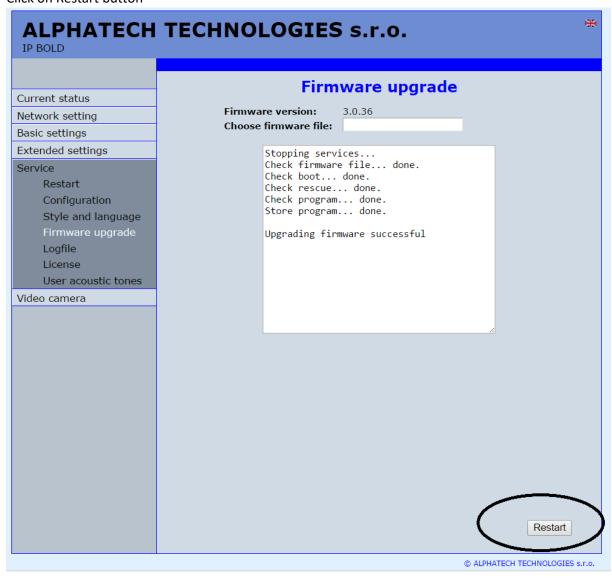

Wait till Restart has been completed

ALPHATECH TECHNOLOGIES s.r.o.	
	Restart
Current status	
Network setting	Waiting for device start up
Basic settings	
Extended settings	
Service	
Video camera	
© ALPHATECH TECHNOLOGIES s.r.o.	

