

DTMF programming sequence of the Brave Smyle analog doorphone to program the 1st and the 2nd buttons, both in day and night modes. It is better to program both the day and the night modes to make sure the Brave Smyle analog doorphone works well both during the day and the night.

Make an incoming call to the Brave Smyle analog doorphone, wait until it answers the call, i.e. until it picks up the line. Then dial via DTMF the following DTMF commands, wait after each DTMF command for a tone confirmation. If you make an error, please repeat the whole process from the beginning (i.e. Make an incoming call to the Brave Smyle analog doorphone, etc.).

DTMF programming sequence:

#0000

8##

81

82

101xxxxxxxxx

102xxxxxxxxx

201xxxxxxxxx

202xxxxxxxxx

9

Meaning:

#0000 (enter to programming mode)

8## (sets the Brave Smyle analog doorphone to default settings)

81 (deletes all phone numbers in the day mode group)

82 ((deletes all phone numbers in the night mode group)

101xxxxxxxxx (1st button, phone number to dial, up to 24 digits), day mode

102xxxxxxxxx (2nd button, phone number to dial, up to 24 digits), day mode

201xxxxxxxxx (1st button, phone number to dial, up to 24 digits), night mode

202xxxxxxxxx (2nd button, phone number to dial, up to 24 digits), night mode.

9 (end of programming mode)

In case of any doubts or to set more advanced features, refer to the „Easy programming table“ and to the manual.

https://www.alphatech.cz/english/files/e_brave-easy-programming.pdf

https://www.alphatech.cz/english/files/e_brave_manual_v26.pdf

<https://www.alphatech.cz/english/brave-smyle.html>