

G S M D O O R I N T E R C O M

***GDI***



**User and programming manual V 2.7**

### **Basic technical parameters:**

Power supply:	12 (9-24) V AC/DC, 500mA (optionally integrated ACU 2000mAh for cca 48h of operation)
GSM:	850/900/1800/1900 MHz
dimension:	185 mm x 99 mm x 40 mm
buttons:	1 or 2 up selected casing (for every button max. 7 phone numbers dialed progressively)
relay:	2x relay with switching contact
Input:	0/5V

### **Basic features:**

GSM Door Intercom is useful for different installation. You just insert SIM card and connect power supply, eventually connect el.lock. For its operation is used GSM network – so you don't need any telephone line or other cables.

- Model with 1 or 2 buttons. Under each button you can program up to 7 phone numbers which are after button press progressively dialed.
- Automatic regulation of microphone volume.
- 2 independent, remotely controlled switching relays with different ways of activation (activation by ringing or by code during call, by button press, etc...)
- Recording of numbers from which you activated the relay by ringing
- 1 input for connection for example alarm (alerting by SMS) or for control of gate(door) opening (beeps during call) etc.
- Voice signaling of different events (for example. „ wait please “, „Open “, etc...

## Function:

**Hands free GSM phone** with preprogrammed phone numbers for 1 or 2 buttons with name cards:

1. **Outgoing call:** After button press is dialed first number from saved list of numbers. The numbers are saved under names ABUTTON1 to ABUTTON7 – it means first number under name ABUTTON1. When called party is busy or not available then automatically second number under name ABUTTON2 is dialed etc. When called party picks up the call the connection is established and next numbers are not dial (the same valid for second button and line BBUTTON).
2. **Incoming call:** up settings will be incoming call picked up either for all calls or for saved numbers on SIM card only. (connection for saved numbers only). GDI might also reject incoming calls (see later in relay function). Before picks up might GDI alert by preprogrammed melody (adjustable). (Notification for call establishing – listen in control).

**2 remotely controlled switching relay.** Each can be controlled up settings by different ways:

1. **By ringing** – incoming call is rejected (confirmation of command accept) and simultaneously is activated selected relay for preprogrammed time. Selected relay can be activated:
  - a. **only** from numbers saved in the phone list of the SIM card, or
  - b. **from any** number.
2. **By code** – during voice communication (incoming as same as outgoing call). The 1-digit code by DTMF might be dialed by called party for relay activation (for preprogrammed time). For each relay you can program different code.
3. **By SMS** – you can remotely switch ON/OFF selected relay or activate relay for certain time mention in SMS.

Relays might be controlled only from preprogrammed numbers at GDI SIM card.

4. **camera mode** – selected relay is ON by picking up the call and it is OFF by hanging up the call.
5. **lighting mode** – selected relay is ON by picking up the call and it stays ON for preprogrammed time after hang up.
6. **button mode** – selected relay is ON after button press and stays ON for preprogrammed time.

### **1 adjustable input:**


1. **SMS sending** „ALARM ON“ to preprogrammed number when input is short circuit against ground. SMS „ALARM OFF“ to next preprogrammed number when input is disconnected. It might be programmed 1 number only (ON/OFF). Then is send 1 SMS only up selected status.
2. **opening detection**. When input is activated during call (for example by gate (door) opening) the GDI generates into a call 3 short beeps for time of input activation.

**Voice signaling of different status.** Up settings might be different status signaling by voice. (language adjustable). When is voice signaling presented during a call it is hearable on both sides of connection (for example „open“)

**Detection of start / restart.** GDI indicates the start device (power) switch relay1 on 7s. This function can be used for example to automatically open after restoration of power supply, remote reboot any device (ringing) with automatic restart after power is restored, etc.


## Installation

### Assembly of front panel

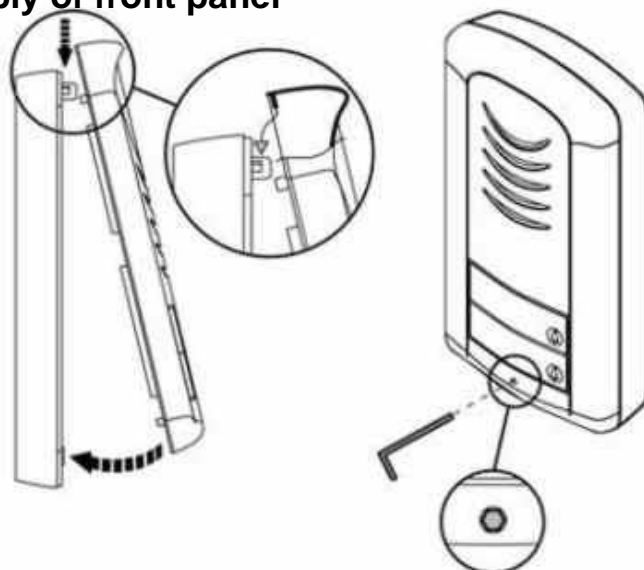


**CAUTION!** During assembly of front panel you might connect/disconnect speaker connector (via schematics)

### Assembly of cards backlighting

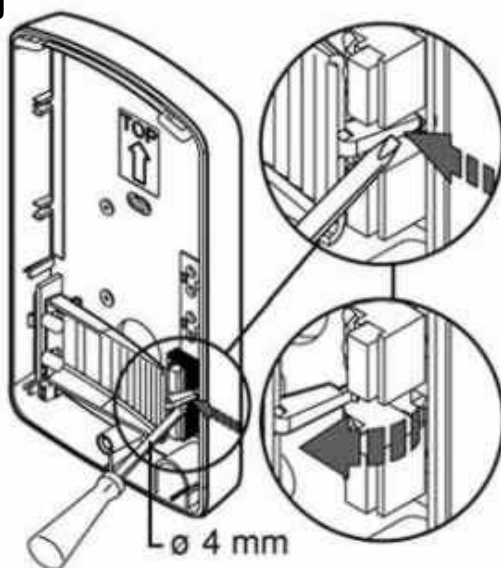


## GDI Wall mounting


Wall mounting assembly you make by attached screws (5mm).

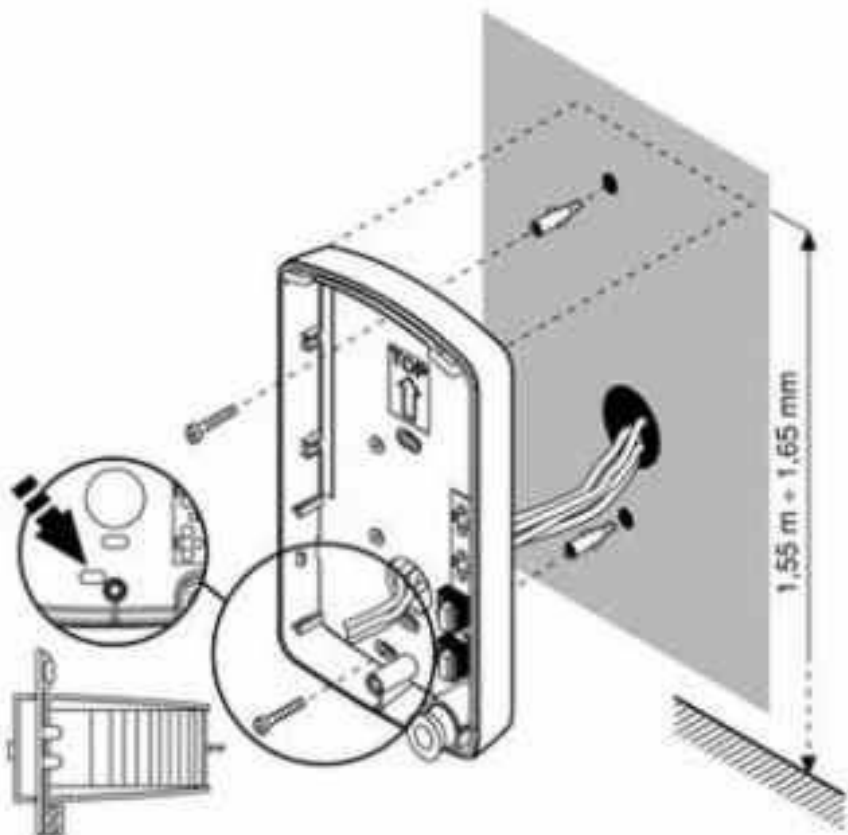

## Replacing backlighting cards after wall mounting

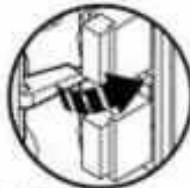


### Cards inserting (name cards)

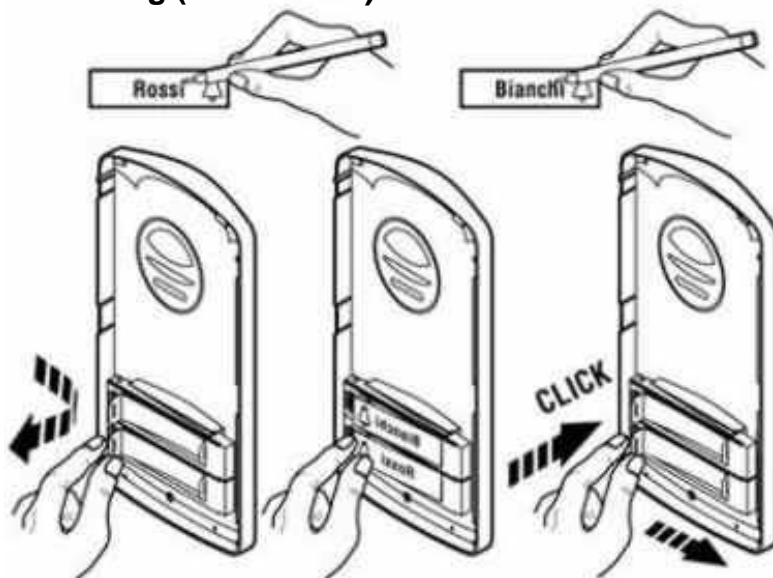

Every button has individual card hold by plastic flag. (via picture).





# Control elements and connection

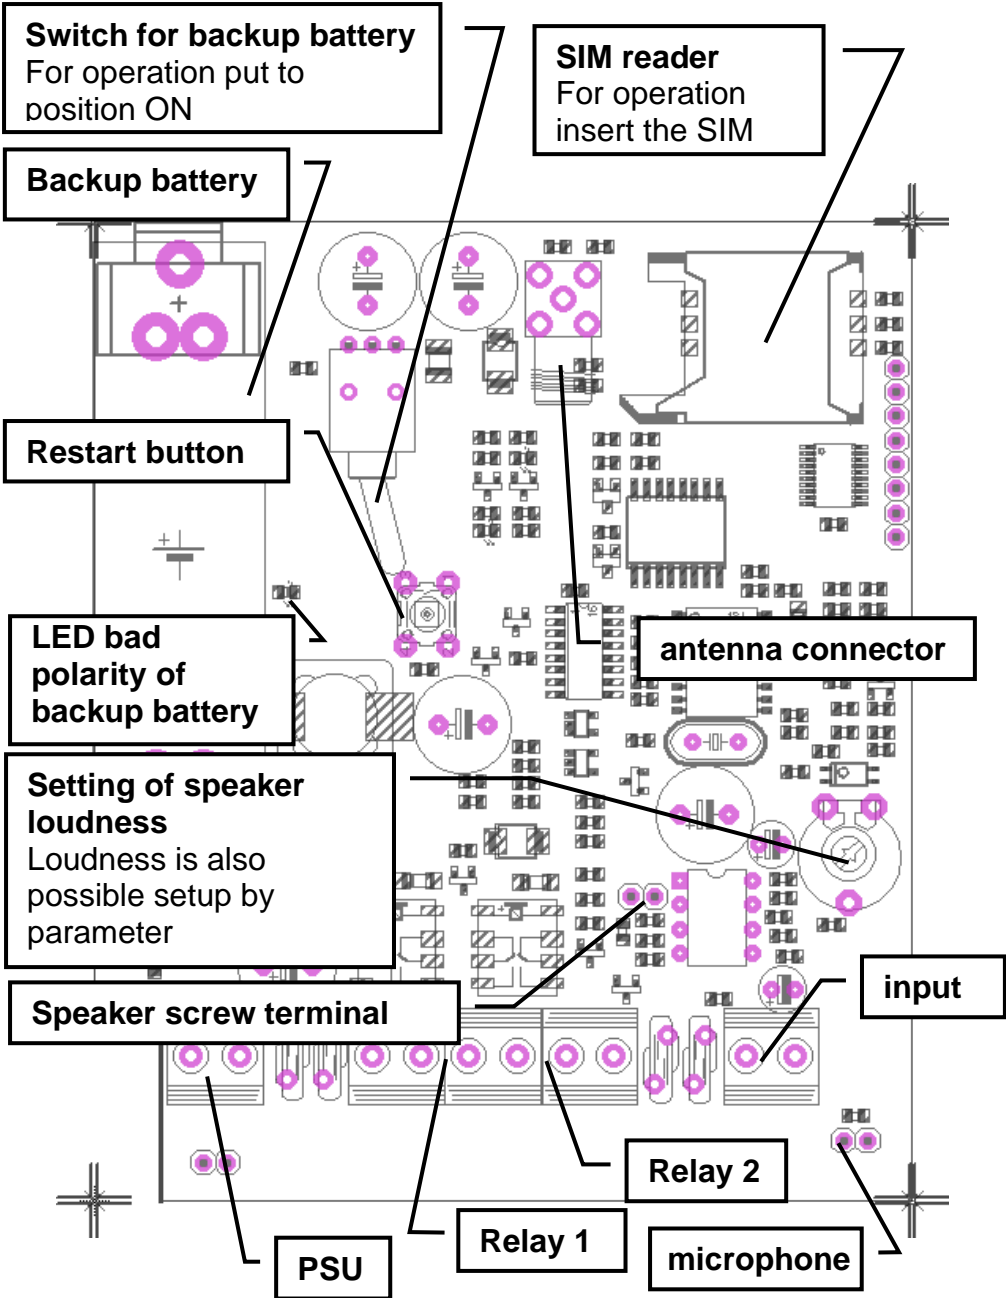



## Examples of relay connection


1. Basic connection - 2 electrical locks and possibility control 2 doors (gates)
2. 2x PSU – possibility to use 2x independent PSU. One for GDI and second for electrical locks. The electrical lock 2 is connected inversely (fire emergency doors).
3. External camera or lighting activation.
4. Electrical lock and additional bell combination.

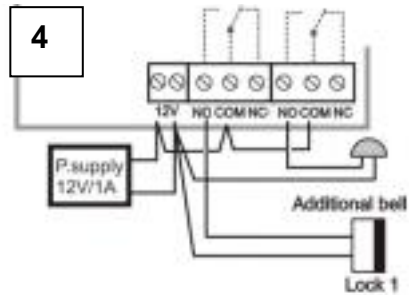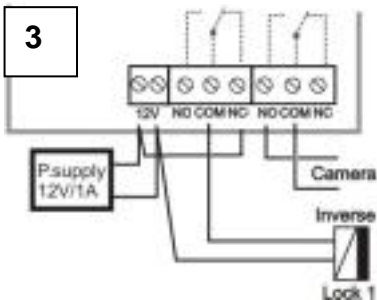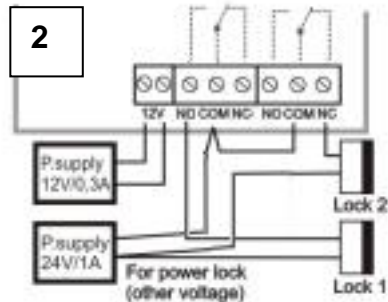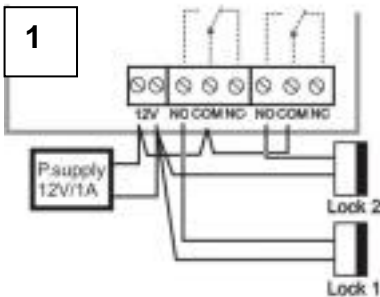


**CAUTION!** Relay contacts can't close 230V directly. To control directly 230V devices you must use contactor.

# Start

## 1. connect antenna and insert the SIM


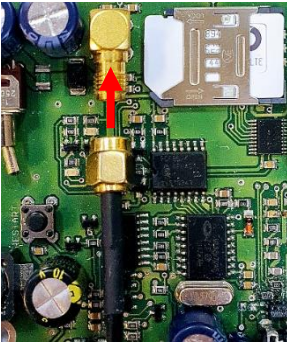


We recommend use SIM without PIN.  
When you need PIN setup PIN 1234.

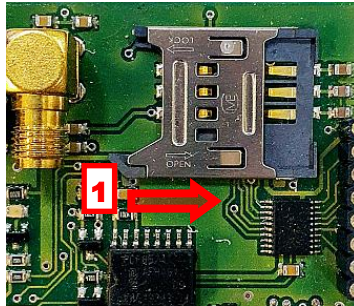

Release the SIM holder (1).

Move it up (2).  
Insert the SIM in correct position  
(3) to the holder.

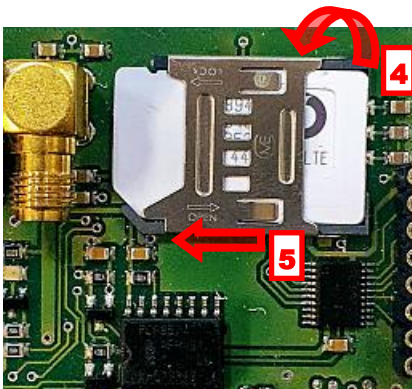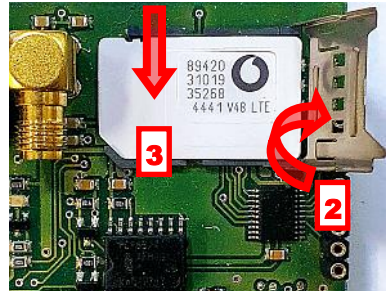

Close the SIM holder (4).

Pull the SIM holder for lock  
up (5)

Note: All programmed parameters are saved on the SIM. The SIM you can insert into GDI already preprogrammed or setup GDI after switching ON (via below).

**When you want use calls rejection (ringing), ask your GSM provider to switch OFF voice mail at used SIM card!**

### **SIM preprogramming**

1. SIM which you desire to use insert to various mobile phone.
2. When PIN is setup – cancel it (or setup PIN to 1234)
3. When you will want to make remote setting save on the SIM phone number of desired mobile under name ADMIN1.
4. On the SIM save phone number which should be dial after pressing button 1 (A), under name „ABUTTON1“.
5. When you have GDI with 2 numbers – save on the SIM also phone number which will be dial after pressing button 2 (B), under name „BBUTTON1“.
6. When you want dial automatically next numbers (when first number is busy or not available) then save those numbers under appropriate names ABUTTON2..7 and BBUTTON2..7
7. Similarly, you can program setting of all parameters (programming table at the end of manual)

The way of phone numbers saving on the SIM depends on mobile phone type. **Please double check that you save numbers to SIM card and not to internal mobile phone memory!**

## 2. Switch on GDI

When all necessary cables are connected (relay, locks, etc.) CAUTION: antenna must be also connected. Then connect speaker connector and connect PSU. The RED LED lights on and after a while yellow LED start flashing (via table). The GDI signaling by tones or by voice SIM reading, GSM network registration and ready for operation (via table). Now you can put on front panel of GDI but don't screw it.

When SIM is preprogrammed you can try first connection – push the button. The GDI must dial programmed phone number. When SIM is not preprogrammed then first step is SIM programming (via following article (3)) and then try connection. After voice connection you can adjust setting of speaker volume. Then screw up front panel of GDI.

## 3. Programs GDI parameters

The parameters in GDI (must be switch on) you can program by 2 ways. By SMS or by PC (special sw) via USB port.

### A) Programming by SMS.

Due security reasons you can program GDI parameters from authorized numbers only. They are saved on SIM under names ADMIN1 to ADMIN9.

### **SMS are always written by BIG LETTERS**

Each SMS elements are splited by space (words). First word is always command. Further word (s) is one or more parameters.

Example: **INIT ADMIN1 +420123456789**

All commands are in appropriate table at the end of manual

1. During first setting when SIM doesn't contents any ADMINx name is necessary such number insert to SIM by SMS with

command INIT. SMS you can send from various number. When SIM already contents even one number under name ADMINx the command is ignored.

2. When you need control relay eventually setup GDI from next ADMIN numbers perform following: from mobile phone with ADMINx number send progressively SMS to GDI with numbers of next ADMINx in SMS format: WRITE ADMIN2 +420xxxxxxxx (WRITE ADMIN3... etc.)
3. From mobile phone with numbers ADMINx send progressively SMS to GDI with numbers which should be dial after button press, SMS format: WRITE ABUTTON1 +420xxxxxxxx (WRITE BBUTTON1... etc.)
4. Up your needs send next SMS with other parameters for opening by ringing, SMS alarm sending, etc.
5. Setup parameters GDI (via table). Parameters you can setup individually for each parameter appropriate SMS. When you need setup more parameters simultaneously, we recommend use SMS for batch setting. By SMS „READ PAR“ read firstly current setting to your mobile.

By editor of SMS messages change at received SMS word READ to WRITE as same as adjust parameters up your needs. Such adjusted SMS send back to GDI as reply. The parameters will be setup.

### **A) Setting by PC through USB via GDIsset (optional)**

1. Connect MiniUSB cable to PC as same as to programming module – green LED must light on at the module. During first usage USB driver might be installed. USB driver is available at attached CD.




2. Remove front cover of GDI and insert connector of programming module into GDI (via picture). On programming module must light on red LED (It is flashing same way like yellow LED on GDI)
3. Run GDIset program and setup appropriate port.
4. Program control GDI connection. After that display GSM signal strength and voltage on GDI (back up ACU). Now you can program:

## Monitor mode

The screenshot shows the GDIset software interface. The main window displays a GDI device image on the left and a list of buttons (ABUTTON1 through ABUTTON7) on the right. A green arrow points from the 'ABUTTON1' label to the device image. The status bar at the bottom shows 'Operator:', 'board voltage: 4030 mV', 'SIM:', 'Ver: 1.0', and 'GDI Ver:'. The right sidebar contains control buttons for GDI (Run, Stop, Save, Load), Battery (Load), and PC (Save, Load). Callout boxes provide instructions: 'For parameters programming stop firmware running in GDI. For operation monitoring don't press! Stop GDI running!', 'Identification of serial line connection', 'After GDI voice connection will show voltage in GDI', and 'After GDI voice connection will show GSM signal strength'.

After click to button monitor is shown GDI operation (when operation is not stopped by button STOP)

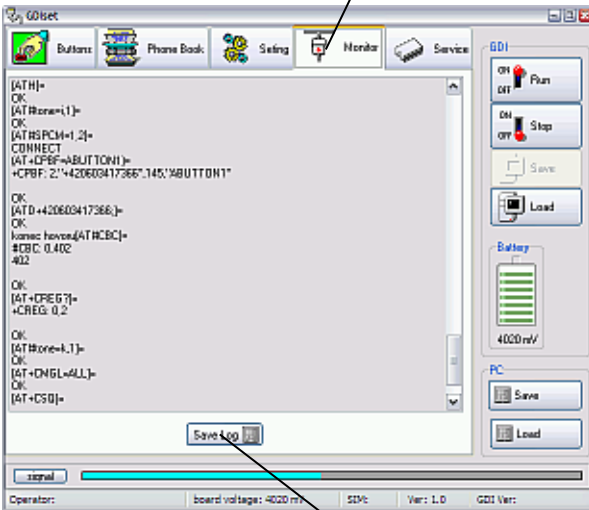

Record savings from monitor to file (for service purposes – record sending)

## Programming mode

After button press STOP program sends to GDI command for stop and wait for GDI response (via)



Waiting for GDI response

# Item Buttons

It is designed for programming phone numbers under each button

**Item for 1 button**

**Field to program up to 7 phone numbers**

**Field to program up to 7 phone numbers for upper button**

**Field to program up to 7 phone numbers for second button**

**Saving of all programmed parameters including numbers to GDI**

**Reading of all programmed parameters including numbers from GDI**

**Saving of all programmed parameters including numbers to PC**

**Reading of all programmed parameters including numbers from PC**

**GDIset version and fw GDI**

**SIM number of position**

**GSM provider where is GDI registered**

**Operator: "T-Mobile CZ"**

**board voltage: 4030 mV**

**SDM: 250 Ver: 1.0 GDI Ver: 301**

**Buttons**

**Phone Book**

**Settings**

**Monitor**

**Service**

**GDI**

**Plan**

**Stop**

**Save**

**Load**

**Battery**

**4030 mV**

**PC**

**Save**

**Load**

**1 button 2 buttons**

**ABUTTON1** +420123456789

**ABUTTON2** +420987654321

**ABUTTON3**

**ABUTTON4**

**ABUTTON5**

**ABUTTON6**

**ABUTTON7**

**BBUTTON1** +42011111111111

**BBUTTON2** +42002222222222

**BBUTTON3**

**BBUTTON4**

**BBUTTON5**

**BBUTTON6**

**BBUTTON7**



## Item Phone Book

Phone book of authorized numbers for ringing opening as same as automatic call receiving.

The screenshot shows the 'Phone Book' window in the GDIweb application. The window title is 'GDIweb' and it has several tabs: 'Buttons', 'Phone Book', 'Setting', 'Monitor', and 'Service'. The 'Phone Book' tab is active, displaying a table with two columns: 'Name' and 'Phone'. The table contains two entries: 'PAVEL' with phone number '+420333333333' and 'JAN' with phone number '+420444444444'. Below the table are buttons for 'Insert Line' and 'Delete Line'. To the right of the table is a 'Find Name' section with a text input field and a 'Find' button. On the far right, there are several control buttons: 'Run', 'Stop', 'Save', and 'Load'. Below these are 'Battery' and 'PC' sections with 'Save' and 'Load' buttons. At the bottom, a status bar shows 'Operator: T-Mobile CZ', 'board voltage: 4000 mV', 'SIM: 190', 'Ver: 1.0', and 'GDI Ver: 301'. Five callout boxes with arrows point to specific elements: 'Position for name' points to the 'Name' column header; 'Position for phone number' points to the 'Phone' column header; 'Add line above cursor' points to the 'Insert Line' button; 'Delete line with cursor' points to the 'Delete Line' button; and 'Find inserted name' points to the 'Find' button in the 'Find Name' section.

Name	Phone
PAVEL	+420333333333
JAN	+420444444444

Operator: T-Mobile CZ | board voltage: 4000 mV | SIM: 190 | Ver: 1.0 | GDI Ver: 301

# Item Setting

**Item Calls**


Loudness of speaker setting

Loudness of microphone setting

Way of incoming call receiving:  
- reject (opening by ringing)  
- automatically picked up calls from numbers at list only  
- pick up all calls

Signalization  
- Informing GDI tones  
- Ringing during incoming call  
- Voice signalling

Waiting Call  
Waiting to dial the next number on the list of button.

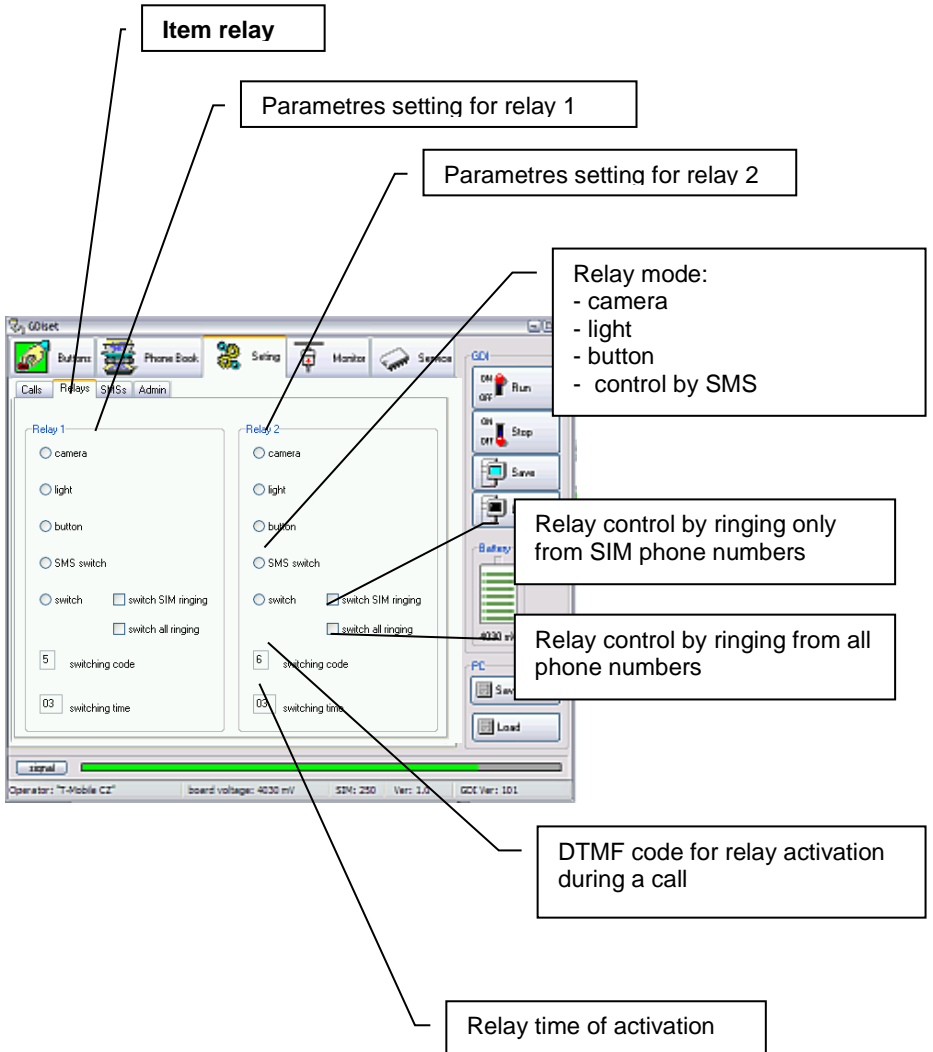

**Item SMS**

Number where will be sent SMS „ALARM ON” when input is activated

Number where will be sent SMS „ALARM OFF” when input is deactivated

Input mode:

- Input deactivated
- Tones when input is activated during a call (open signal)
- sending SMS

SMS ALARM ON: +420666666666

SMS ALARM OFF: +420666666666

Port:

- disable
- enable tone
- enable SMS:

SMS with opening numbers

Clock from GSM

Operator: "T-Mobile CZ"    board voltage: 4030 mV    SIM1: 250 Ver: 1.0    GDI Ver: 1.0.1


PC: Save, Load

Sending SMS to ADMIN1 with list of numbers which activated relay by ringing.

Activation of time settings from GSM network

Item ADMIN numbers setting

Field to save up to 7 ADMIN numbers

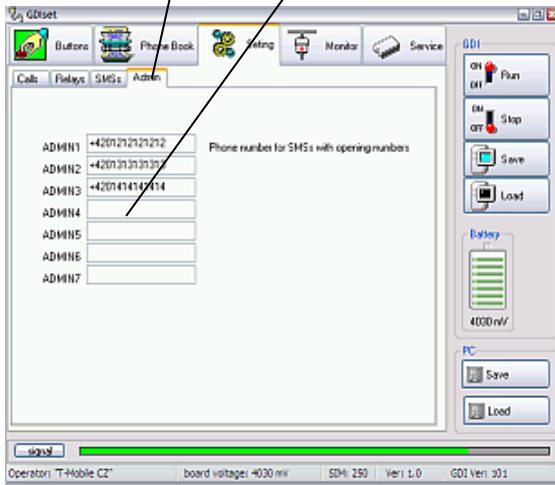

## Item Service

It is designed for upgrade of firmware and voice messages in GDI.

**CAUTION!** Unauthorized manipulation can block the unit.


The image shows the GDIset software interface with several callout boxes:

- List of files you want record to GDI (manually editable)**: Points to the empty list area on the left side of the main window.
- Reading of list from PC**: Points to the 'LoadList' button in the central panel.
- List erasing**: Points to the 'DelList' button in the central panel.
- Start of files saving from list to GDI. Indicator shows the process of savings.**: Points to a progress bar in a smaller screenshot below, which shows a green bar and a 'Load' button.
- Savings of selected ringing tone to GDI**: Points to the 'set to GDI' button in the 'type of Ring' section.
- Select and play ringing tone**: Points to the dropdown menu in the 'type of Ring' section.

The main interface includes a menu bar (Buttons, Phone Book, Settings, Monitor, Service), a central panel with 'LoadList', 'DelList', and 'Upgrade' buttons, and a right sidebar with 'GDI' (Run, Stop, Save, Load), 'Battery' (4030 mV), and 'PC' (Save, Load) sections. The status bar at the bottom shows: Operator: "Mobile C2", board voltage: 4030 mV, SIM: 250, Ver: 1.0, GDI Ver: 101.

When all necessary is setup then save it by button Save to GDI.

### Return from programming mode to monitor mode (restart of GDI)

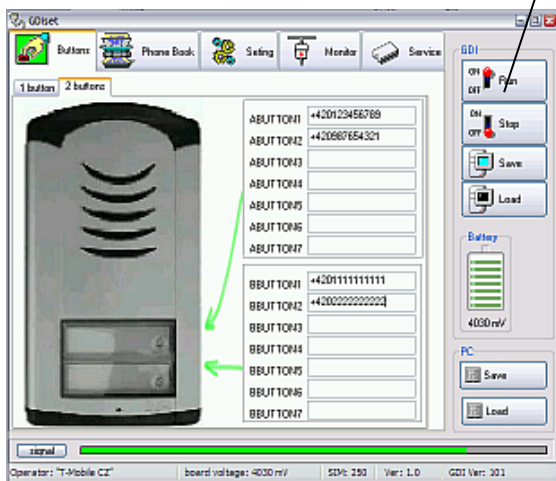

To return to monitor mode (run GDI) click on button „Run“. Programs detects GDI runs the same way like stop:

GDI behavior after restart is the same like during power supply connection (tones, eventually voice messages).

## Table of SMS commands

command ( SMS)		Functionality	Des
SMS might be sent from ADMINx numbers only	<b>READ STAT</b>	Reading of GDI status (firmware, time, relays status etc.)	
	<b>READ PAR</b>	Reading of all setup parameters	
	<b>READ JMENO</b>	Reading of phone number for NAME	
	<b>CLR JMENO</b>	Erasing phone number for NAME	
	<b>INIT ADMIN1 +420cc...c</b>	Initialization – first GDI setting – parameters you can program from number ADMIN1 +420cc..c	
	<b>SET REL1 ON</b>	Activation relay 1	
	<b>SET REL1 OFF</b>	Deactivation relay 1	
	<b>SET REL1 ON xx</b>	Activation relay1 for xx minutes (xx=00 -99)	
	<b>SET REL2 ON</b>	Activation relay 2	
	<b>SET REL2 OFF</b>	Deactivation relay 2	
	<b>SET REL2 ON xx</b>	Activation relay 2 for xx minutes (xx=00 -99)	
	<b>WRITE NAME +420cc...c</b>	Saving of phone number under NAME	
	<b>WRITE PAR VOLIN:x</b>	Saving of microphone loudness [x=1-7]	4
	<b>WRITE PAR VOLOUT:x</b>	Saving of speaker loudness [x=1-7]	4
<b>WRITE PAR INCALL:x</b>	Processing of incoming call: x: 0 – calls rejected (ringing in) 1- calls received from SIM only (list) 2 – all calls received	0	
<b>WRITE PAR WRCALL:x</b>	Sending SMS with the numbers of which was to open up 0 – deactivated 1 - activated	0	



	<b>WRITE PAR TMGSM:x</b>	Time setup up GSM network x: 0 – OFF 1 - ON	1
	<b>WRITE PAR TONE:x</b>	Setting of acoustic signalization x: 0 – switch OFF 1 – signaling by service tones 2 – ringing of incoming call is ON 4 – signaling by voice messages and combination – for ex. 7 – all is ON	5
	<b>WRITE PAR INPMOD:x</b>	Input mode x=0 – deactivated x=1 – beeps into call (opening indication) x=2 – during activation/deactivation sends SMS	
	<b>WRITE PAR WAIT:xx</b>	Waiting to dial the next number on the list xx – 10 to 90 sec. (by dozens)	20
<b>SMS might be sent from ADMINx numbers only</b>	<b>WRITE PAR RL1COD:y</b>	Code for relay1 activation during call y= 0-9	5
	<b>WRITE PAR RL1MOD:x</b>	Relay 1 modes x=0 – control by SMS x=1 – switch mode (ringing in only from SIM phone number or by code) x=2 – camera mode (activated by pick up, deactivated by hang up) x=3 – lighting mode (activated by pick up and stays ON for „activation time“ after hang up) x=4 – activated for „activation time“ after button press x=5 - switch mode all (ringing in from all phone number or by code)	1

<b>WRITE PAR RL1TMON:yy</b>	Relay1 activation time after ringing in or by code yy seconds yy= 00-99	03
<b>WRITE PAR RL1RING:x</b>	Relay1 activation by ringing in x=0 – OFF x=1 - ON	1
<b>WRITE PAR RL2COD:y</b>	Code for relay2 activation during call y=0-9	6
<b>WRITE PAR RL2MOD:x</b>	Relay 2 modes x=0 – control by SMS x=1 – switch mode (ringing in only from SIM phone number or by code) x=2 – camera mode (activated by pick up, deactivated by hang up) x=3 – lighting mode (activated by pick up and stays ON for „activation time“ after hang up) x=4 – activated for „activation time“ after button press x=5 - switch mode all (ringing in from all phone number or by code)	0
<b>WRITE PAR RL2TMON:yy</b>	Relay2 activation time after ringing in or by code yy seconds yy=00-99	05
<b>WRITE PAR RL2RING:x</b>	Relay2 activation by ringing in x=0 – OFF x=1 - ON	0
<b>WRITE ALARMON +420cc..c</b>	Savings of number for SMS „ALARM ON“ (input grounding)	
<b>WRITE ALARMOFF +420cc..c</b>	Savings of number for SMS „ALARM OFF“ (input disconnection)	
<b>CAL AT+CSQ</b>	Signal strength level	

<b>CAL AT+CPBR=x</b>	Info about number saved on position x	
<b>CAL AT+CCLK="&lt;time&gt;"</b>	Setup time in GDI <time> Format <time>= yy/MM/dd,hh:mm:ss±zz yy – year (00-99) MM – month (01-12) dd – day (01-31) hh – hours (00-23) mm – minutes (00 – 59) ss – seconds (00 – 59) ±zz – time zone (-47..+48) hours	

Command types:

**READ** – command for reading parameters as same as phone numbers from SIM card

**CLR** – command to erase phone numbers from SIM card.

**CAUTION!** When you use SMS for numbers erasing then don't forget that one ADMINx number must stayed – otherwise remote settings will not be possible (necessary to make new initialization).

**INIT** – Initialization. During first setting when SIM doesn't include any ADMINx number is necessary to put such number on the SIM card. It is done by SMS with INIT command. The SMS might be sent from various number. When SIM card already has at least one number with name ADMINx the command is ignored.

**WRITE** – command to save parameters as same as phone numbers to SIM card

**CAL** – after command CAL you can put various AT command of used GSM module (for example: module reset, time setting etc.). **Those commands please use with appropriate knowledge only! It can cause blocking of whole unit!**

## Names function saved in phone book

NAME	function
ABUTTON1	<ul style="list-style-type: none"> <li>- to this number GDI call when button is pressed (upper button)</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ABUTTON2	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under ABUTTON1 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ABUTTON3	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under ABUTTON2 is busy, unreachable, not picked up a call for certain</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ABUTTON4	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under ABUTTON3 is busy, unreachable, not picked up a call for certain</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ABUTTON5	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under ABUTTON4 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ABUTTON6	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under ABUTTON5 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ABUTTON7	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under ABUTTON6 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
BBUTTON1	<ul style="list-style-type: none"> <li>- to this number GDI call when down button is pressed (version with 2 buttons)</li> </ul>

	<ul style="list-style-type: none"> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
BBUTTON2	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under BBUTTON1 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
BBUTTON3	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under BBUTTON2 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
BBUTTON4	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under BBUTTON3 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
BBUTTON5	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under BBUTTON4 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
BBUTTON6	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under BBUTTON5 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
BBUTTON7	<ul style="list-style-type: none"> <li>- to this number is called from GDI when number under BBUTTON6 is busy, unreachable, not picked up a call for certain time</li> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ADMIN2	<ul style="list-style-type: none"> <li>- by ringing in activate relay 1 and relay 2</li> </ul>

to ADMIN7	<ul style="list-style-type: none"> <li>- Activate relay 1 and relay 2 by SMS</li> <li>- Read GDI status and numbers in phone book by SMS</li> <li>- Edit name and numbers on SIM card by SMS</li> <li>- Control next features by SMS (AT commands)</li> <li>- Setup parameters by SMS</li> <li>- calls are automatically received from this number</li> </ul>
ADMIN1	<p>The same like ADMIN2 to ADMIN7 and moreover:</p> <ul style="list-style-type: none"> <li>- to this number are sending reports by SMS includes list of relay activation by ringing in</li> <li>- to this number is sending SMS with message about low battery level (option)</li> </ul>
Various name	<ul style="list-style-type: none"> <li>- relay1 or relay2 activated by ringing in</li> <li>- calls are automatically received from this number</li> </ul>
ALARMON	- to this number is send SMS „ALARM ON“ when input is activated against ground
ALARMOFF	- to this number is send SMS „ALARM OFF“ when input is deactivated
VER	- firmware version in GDI - <b>just info – do not adjust!</b>
PARGDI	<ul style="list-style-type: none"> <li>- GDI parameters</li> <li>A#B#C#D#E#F#G#H (default 4#4#0#0#1#5#0#2)</li> <li>A – microphone sensitivity [1-7]</li> <li>B – speaker loudness [1-7]</li> <li>C – incoming calls: 0 – all rejected (ringing in relays activation) <ul style="list-style-type: none"> <li>1 – accept from numbers on SIM card only</li> <li>2 – accept all</li> </ul> </li> <li>D – record who opened by ringing in: 0 – deactivated <ul style="list-style-type: none"> <li>1 – activated</li> </ul> </li> <li>E – time setup from GSM network: 0 – deactivated <ul style="list-style-type: none"> <li>1 – activated</li> </ul> </li> <li>F – signalization: 0 – OFF <ul style="list-style-type: none"> <li>1 – tones</li> <li>2 – ringing of incoming call</li> <li>4 – voice messages</li> </ul> <p style="padding-left: 40px;">all combination available – for ex. All is ON = 7</p> </li> <li>G – input mode: 0 – input deactivated</li> </ul>

	<p>1 – when input is grounded beeps into call (signaling of opened door)</p> <p>2 – SMS when input is activated/deactivated</p> <p>H - waiting to dial the next number on the list [1-9]</p> <p>value is in dozens of seconds</p>
PARRL1	<p>- parameters for relay 1</p> <p>A#B#CC#D (default 5#1#03#1)</p> <p>A – DTMF code for relay activation during call [0-9]</p> <p>B – relay mode: 0 – SMS mode, control by SMS</p> <p>1 – switch mode, activated by ringing in from SIM phone numbers or by DTMF code during call</p> <p>2 – camera mode (activated by pick up, deactivated by hang up)</p> <p>3 – lighting mode (activated by pick up, stays activated for „activation time“ after hang up)</p> <p>4 – button mode (activated for „activation time“ after button press)</p> <p>5 – switch mode all, activated by ringing in all phone numbers or by DTMF code during call</p> <p>CC – activation time [00-99]</p> <p>D – relay activation by ringing in: 0 – deactivated 1 - activated</p>
PARRL2	<p>- parameters for relay 2</p> <p>A#B#CC#D (default 6#0#05#0)</p> <p>A – DTMF code for relay activation during call [0-9]</p> <p>B – relay mode: 0 – SMS mode, control by SMS</p> <p>1 – switch mode, activated by ringing in from SIM phone numbers or by DTMF code during call</p> <p>2 – camera mode (activated by pick up, deactivated by hang up)</p> <p>3 – lighting mode (activated by pick up, stays activated for „activation time“ after hang up)</p> <p>4 – button mode (activated for „activation time“ after button press)</p> <p>5 – switch mode all, activated by ringing in all phone numbers or by DTMF code during call</p> <p>CC – activation time [00-99]</p> <p>D – relay activation by ringing in: 0 – deactivated 1 - activated</p>

Names with numbers might be saved to phone book also by various mobile phone (follow instruction of mobile phone manual). **Names ABUTONx, BBUTONx, ADMINx,**

**ALARMON, ALARMOFF, PARGDI, PARRL1, PARRL2 must be written by big letters. Between names and numbers is not a space**

***GDI response for SMS „READ STAT“***

READ STATUS:  
VER: 101  
BATTERY:4030mV  
TIME: "00/01/01,00:01:55"  
OPER: T-Mobile CZ  
INP:1  
RL1:0  
RL1:0

***GDI response for SMS „READ PAR“***

READ PAR:  
VOLIN:4  
VOLOUT:4  
INCALL:0  
WRCALL:1  
TMGSM:1  
TONE:5  
INPMOD:2  
WAIT:20  
RL1COD:5  
RL1MOD:4  
RL1TMON:03  
RL1RING:1  
RL2COD:6  
RL2MOD:1  
RL2TMON:05  
RL2RING:1








***SMS example for GDI parameters setting***

WRITE PAR:  
VOLIN:1  
TONE:7  
INPMOD:2  
RL1COD:2







## GDI tones

Except ordinary tones and signaling of GSM communication (ringing tone, busy tone, different provider's messages) the GDI has own signaling of operation (via setting possibilities).

	<b>High tone – Alerting</b> GDI detects not registration to GSM net (antenna not connected, wrong PIN,), dialling number to GSM etc..
	<b>Medium level tone – verify action</b> GDI reads the SIM, registrate to network, answer for SMS, measure voltage etc...
	<b>Low level tone – error</b> GDI detects error (for example: low voltage, no GSM reaction for command. Can react by unit restart
	<b>High tone follows by medium level tones in period cca 5 sec.</b> start a initialization of GDI (registration to network, SIM reading etc..)
	<b>High tone repeated</b> GDI detects disconnection from GSM net (antenna disconnected, wrong PIN....)
	<b>Medium level tone repeated during button holding, high tone</b> Button press detection, dial of preprogrammed number
	<b>High tone, once after dial number to GSM</b> called party reached


# LED signalling

<b>Red LED</b>		<b>Permanent light</b> GDI power supply is ON
		<b>Not light</b> GDI switched OFF
<b>Yellow LED</b>		<b>Not light</b> GDI switched OFF
		<b>Flashing space and light same duration</b> GDI is not registrated to GSM network
		<b>Short flashing with frequency 2 sec.</b> GDI registrated to GSM network
		<b>Permanent light</b> GDI establish a call or it is a call or GDI in programmiing mode

## GDI with backup battery

If you have already GDI with a backup battery in the delivery, pull out before operation insulating tape.


**Do not store the device with a battery pack without insulating tape!** Self-discharge can damage the battery, not covered by the manufacturer's warranty.

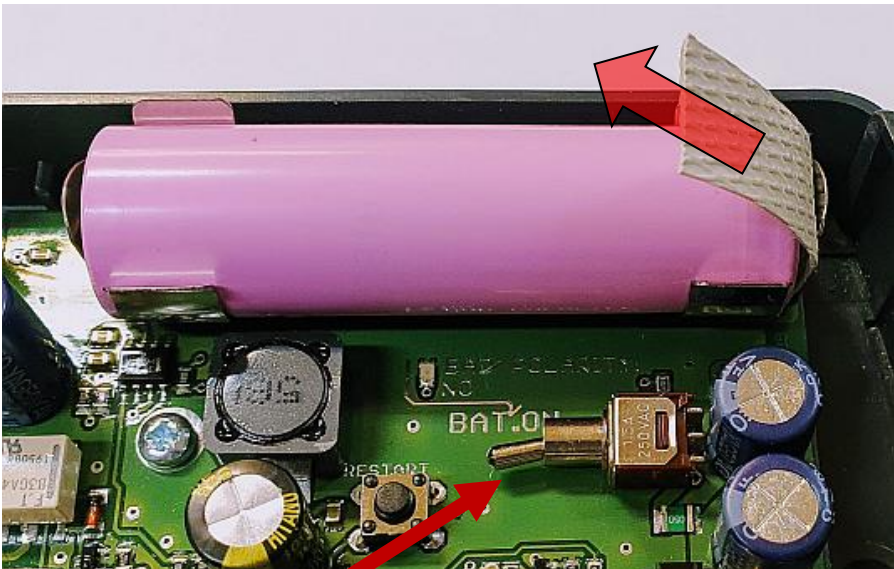

**Turn on the battery: move the switch lever to a position closer to the battery holder**

## Inserting the backup battery:

- Use only batteries approved by the manufacturer:  
Li-Ion 18650 2000-2600mAh
- Observe the polarity (+ cap is insulated from the housing). Never insert the battery upside down! The device may be damaged. After inserting the battery, the red LED next to the switch must not light up (incorrect polarity)!

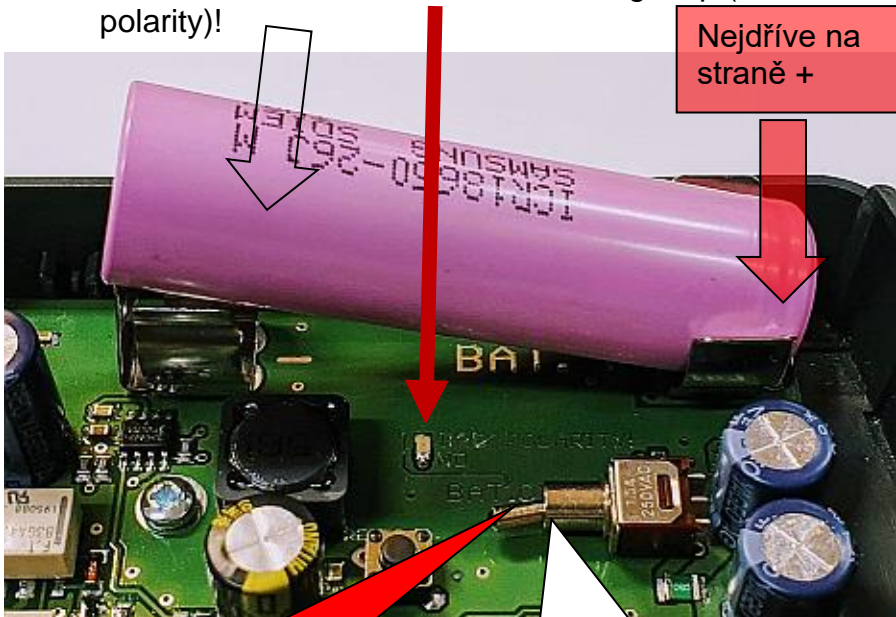

**Before inserting the battery, turn off the battery by sliding the switch lever to the position away from the battery holder.**

After inserting, turn on the battery again by sliding the power switch lever closer to the battery holder.

**The manufacturer is not liable for defects caused by failure to comply with the prescribed procedure.**

## Technical parameters:

Dimension	185 mm x 99 mm x 40 mm
Operating position	various
Operating condition	temperature: -20 to + 50°C humidity: 10% ÷ 80% from 30° C
Power supply	12 (9-24) V AC/DC, 500mA (optionally integrated ACU 2000mAh for cca 48h of operation)
Buttons	1 or 2 up casing (for each button max 7 numbers progressively dialed)
Relay 2x	switching contact
Max. voltage	48V when I<1A
Max. Current	2A when U<30V
Activation time by code	1 to 99 sec
Activation time by SMS	1 to 99 min
Detection of start / restart.	relay1 contact switch to 7s
Input:	0/5V
GSM:	
networks	850/900/1800/1900 MHz
SIM	3V, 1.8V



**Alphatech spol. s r.o.**

**Jeremenkova 88**

140 00 Praha 4

**tel. 244 461 016**

e-mail: [info@alphatech.cz](mailto:info@alphatech.cz)

internet: <http://www.alphatech.cz>

naše souřadnice GPS (WGS 84)

N 50°02'35.5" E 14°25'42.0"

2.2.2024